



# COMMERCIAL TRAINING TOOLBOX TIPS

## Lennox CORE Service App Wired Thermostat Mode

Applies to Lennox Model L and Enlight Rooftop Units 3-25 tons



### Helpful Resources


1. Installation and service literature on [LennoxCommercial.com](http://LennoxCommercial.com) or [LennoxPros.com](http://LennoxPros.com).
2. [CORE Service App Reference Guide](#).
3. [CORE Service Curriculum](#) on [LennoxPros.com](http://LennoxPros.com).
4. [Lennox Model L and CORE Control System](#) videos.

### Requirements

1. iOS or Android device - phone or tablet with Android 6.0 (Marshmallow) or iOS version 11 minimum. Android hardware requires 2GB RAM and a 2GHz Core processor.
2. CORE Service App found at the appropriate App Store or at the following QRs:



Wired Thermostat mode is used when 24vac is applied to the thermostat inputs for control. 24vac will originate from the 'R' terminal within the SmartWire connection array and will be switched by either a conventional thermostat or building automation system for control - applying 24vac to the G, W1, W2, Y1, Y2, OCP, DI-4 inputs.

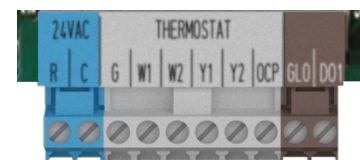

The technician will use the Network Integration wizard to set up the controller for wired thermostat mode.

Excerpt below from [CORE Service App Reference Guide](#). Further instructions are included in the guide.

From the Unit Operation screen. Tap the Menu button. (3 lines in the upper left of the screen) to open the menu.

Tap Network Integration.

Tap Network Setup Wizard.

Tap Wired Thermostat.

Tap Next.

Self-Service Technical Support with No Wait Times  
Click on the black logos below to download these apps

Download all [Training Toolbox Tips](#)  
Register for [Technical Training Webinars](#)

