VARIABLE REFRIGERANT FLOW SYSTEMS



Touchscreen Wi-Fi Controller

AUTO: COOL

60 Hz

COMMERCIAL PRODUCT SPECIFICATIONS

The F1943L-3P (**19B16**) is a wired local touchscreen controller for VRF Heat Recovery, VRF Heat Pump and Mini-VRF Systems.

Remote control via Wi-Fi is available with the free VRF Controller App. See page 7.

NOTE - Refer to the Controller Installation Instructions and the App User Manual for additional information.

Touchscreen Display

- 4 in. capacitive touchscreen with full color LCD display and intuitive navigation
- Screen is illuminated when touched and remains lit during control access

Dimensions

- 3-5/8 x 5 x 7/8 in. (H x W x D)
- Wallplate and additional hardware is furnished for installation

Wiring

 Controller uses low voltage 4-wire 18AWG shielded cable (not furnished) for easy connection to the indoor unit

Grouping

Controller can control up to 16 indoor units on the same system



ŝ

SET TO **72**

HUMIDITY

CONTROLLER USER SETTINGS

HOME SCREEN (Thermostat ON)			Notes	
С 5ЕТ ТО 72.0 НИМПОІТҮ 35%		0	Touch blank screen to turn on the backlight if brightness setting is set to 0%.	
ACTUAL TEMPERATURE DISPLAY		Touch the MODE button on the upper-rig	Touch the MODE button on the upper-right	
UP/DOWN ARROWS ADJUST TEMPERATURE	62°F to 86°F		of the home screen to access the Main Menu screen.	
TEMPERATURE "SET TO" DISPLAY]		
RELATIVE HUMIDITY DISPLAY]		
MODE	HEAT			
	COOL			
	OFF			

Bulletin No. 210967 July 2023 Supersedes April 2022

F1943L-3P

CONTROLLER USER SETTINGS

CONTROL	LER USER SEITI	NGS	
MAIN MENU	SCREEN	Notes	
<	System Mode:	\$	
	OFF HEAT C	OOL AUTO DRY	
	Fan Operation:		
	Always ON		
	Fan Speed:		
	LOW MED	MAX AUTO	
SETTINGS (Ge	ear Icon)		Touch the gear icon on the upper-right of the screen to access the Settings screen. See page 2.
SYSTEM MOD	E	OFF	Touch a button to switch unit operation.
		HEAT	
		COOL	
	ON		
(ALWAYS ON)			
		OFF	
FAN SPEED		LOW	
		MED	
		MAX	
		AUTO	
SETTINGS S	CREEN		Notes
<			
	Celsius Temperature		
	Network	MyNetwork >	
	Display Brightness		
	Addional Settings	>	
TEMPERATUR	RE	OFF	(default) and Celsius.
NETWORK		1	Touch to set up network connection. Refer to the VRF Wi-Fi Controller Mobile App User Manual for complete Wi-Fi setup instructions. See page 7.
DISPLAY BRIGHTNESS		0 to 100%	Touch to adjust brightness.
			0% setting turns off screen after 30 seconds.
ADDITIONAL	SETTINGS		Touch to access Additional Setting screen . See page 3.

CONTROLLER USER SE	ITINGS		
ADDITIONAL SETTINGS SCR	EEN		Notes
<			
Opening Manual			
Service Menu	>		
Into Screen	>		
D	aboot Dovice		
n	eboot Device		
SERVICE MENU			Touch to access Service Menu screen, see
			page 3. Passcode protected.
INFO SCREEN			Displays controller information (firmware, etc.).
REBOOT DEVICE BUTTON		0	Reboots Controller
SERVICE MENU SCREEN (Pas	sscode Required)		Notes
<			
Antificial Caliburat	View		
	Artificial Calibration >		
Auxiliary Heat Se	etup >		
Change Passcoo	1e >		
Indoor Unit Settings >			
ARTIFICIAL CALIBRATION	-5°F to 5°F		Touch to adjust temperature.
AUXILIARY HEAT SETUP		0	Touch for Aux Setup screen. See page 3.
CHANGE PASSCODE		0	Touch to change passcode. Enter a new passcode (4 digits). Touch Save to store.
INDOOR UNIT SETTINGS		0	Touch for Indoor Unit Settings screen. See page 6.
AUXILIARY HEAT SETUP			Notes
K Selec	t Aux System Type		
None			
Eletric Heat IDU/Ducting			
Gas Heat			
Other Heater			
NONE			
ELECTRIC HEAT IDU/DUCTING	i	0	Touch to select Heating type. Touch Next to
GAS HEAT			page 4.
UTHER HEAT			

CONTROLLER USER SETTINGS

AUX/ALT HEAT OPTIONS SCREEN			Notes	
<	Aux/Alt F	leat Options		
	VRF is Primary Heat S	ource		
	VRF is: Auxiliarv Heat			
	Set Switchover Tempe	eratures >		
	Set Fan Options	>		
VRF is PRIMAR	RY HEAT SOURCE	ON (default)		Touch button to switch.
		OFF		
VRF is AUXILIA	ARY HEAT	ON .	⑦	Touch button to switch.
		OFF (default)		
SETSWITCHO	VER TEMPERATURE		0	Louch for Set Switchover Temperatures screen. See page 5.
SET FAN OPTIO	ONS			The Set Fan Options screen displayed is
				dependent on the neat type selected.
		0	Heat on page 4.	
			0	See <u>Alt</u> Heat Fan Options screen for Gas Heat or Other on page 5.
AUX HEAT FA	N OPTIONS SCREEN			Notes
<	Aux Heat	Fan Options		
	THERMO	ON		
	Fan Speed:		This screen is for Electric Heat fan set	
	LOW	MED HIGH		
FAN OPERATION		THERMO	0	Touch to switch.
		ON		
FAN SPEED		LOW	0	Touch to switch.
		MED		
		HIGH		

CONTROLLER USER SETTI	NGS		
ALT HEAT FAN OPTIONS SCREEN	ALT HEAT FAN OPTIONS SCREEN		
K Alt Heat	Fan Options		
OFF TH	IERMO ON		
Fan Speed:	MED HIGHT	This screen is for Gas Heat or Other Heat source fan settings.	
FAN OPERATION	OFF THERMO	Touch to switch.	
FAN SPEED	ON LOW MED	Touch to switch.	
SWITCHOVER TEMPERATURES S	CREEN	Notes	
Switch Over	Temperatures		
Set Switchover Ext. Temperature >			
SET AUX/ALT DELTA TEMPERATURI	E –20°F to 0°F	Touch to adjust temperature.	
SET SWITCHOVER TEMPERATURE	–8°F to 80°F	Touch to adjust temperature.	

CONTROLLER USER SET	TINGS	
INDOOR UNIT SETTINGS SCREE	N	Notes
<		
Static Pressure Sett	ing >	
Swing Settings	>	
Set Indoor Unit Addr	ress >	
Temperature Sensor	r Use >	
STATIC PRESSURE SETTING	0.00 to 1.00 in wa	Touch up/down arrows to adjust Touch
		Save button to store.
SWING SETTINGS	Vertical Swing Settings	Touch to set Swing Settings . See page 6.
	Horizontal Swing Settings	
SET INDOOR UNIT ADDRESS	1 to 16	Touch up/down arrows to adjust. Touch Save button to store.
TEMPERATURE SENSOR USE	Controller (default)	Touch to switch.
	Individual Indoor Unit	
SWING SETTINGS SCREEN		Notes
<		
Vertical Swing Setting:		
Swing Pos1 Pos	s2 Pos3 Pos4 Pos5	
Horizontal Swing:		
Horizontal Swing		
	Save	
VERTICAL SWING SETTINGS	Swing	Touch Swing to activate up/down louver
	Pos1	operation. Louvers oscillate up and down
	Pos2	Touch a Position number to set the louvers
	Pos3	at one of five different fixed airflow angles.
	Pos4	
	Pos5	
HORIZONTAL SWING SETTINGS	ON	Touch to activate left/right louver operation.
	OFF	 Louvers swing left and right automatically.

Reset Button

- Reset button is hidden behind the first grill on the top right of the controller.
- Single Press Reboots the controller without changes to the stored information.
- Long Press Holding the switch down for more than Five Seconds enables a factory reset.
- **NOTE -** Factory reset does not erase network connection information.

MOBILE APP

The free VRF Controller app is available for use on iPhone[®] and iPad[®], Android[™] devices.

Control cooling/heating temperatures, operating mode, fan operation and power for multiple units. Allows remote control of VRF systems directly from a smartphone. The intuitive design gives you direct control over your system and comfort control, all in an easy-touse layout.

NOTE - Refer to the VRF Wi-Fi Controller Mobile App User Manual for complete Wi-Fi setup instructions.



Apple, the Apple logo, iPhone and iPad are trademarks of Apple Inc. registered in the US and other countries.

Android is a trademark of Google Inc. Use of this trademark is subject to Google permission.

MOBILE APP CONTROLLER SCREEN SETTINGS



REVISIONS	
Sections	Description of Change
Document	Additional features added.



Visit us at www.Lennox.com For the latest technical information, <u>www.LennoxCommercial.com</u> Contact us at 1-800-4-LENNOX

NOTE - Due to Lennox' ongoing commitment to quality, Specifications, Ratings and Dimensions subject to change without notice and without incurring liability. Improper installation, adjustment, alteration, service or maintenance can cause property damage or personal injury. Installation and service must be performed by a qualified installer and servicing agency.