


****Equipment Firmware Update****

The field installer should check CORE firmware version and update to the most recent version available.

To Verify:

- Pair to the Lennox CORE Control System using the Lennox CORE Service App.
- Once paired, proceed to the RTU Menu > Data > Factory selection.

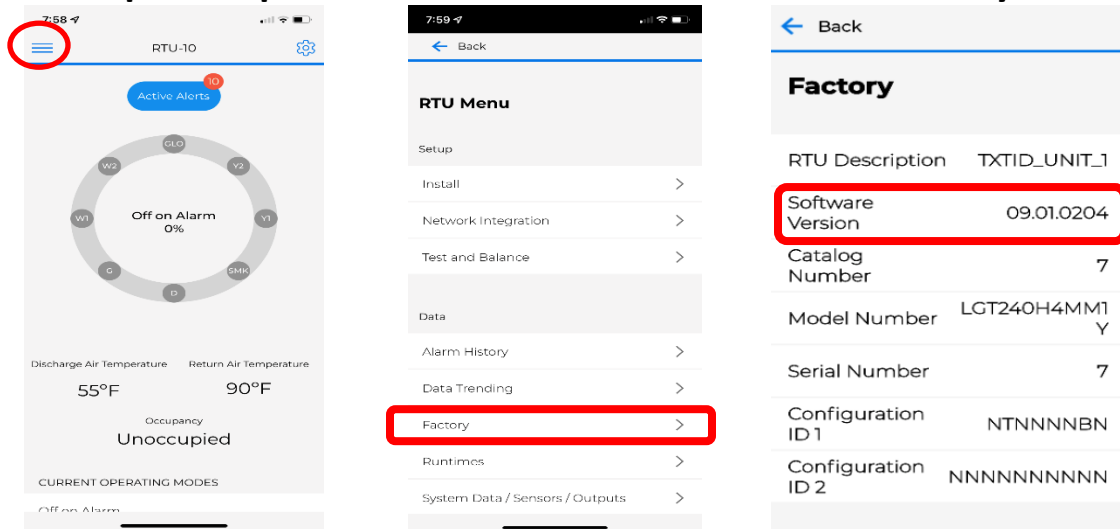

- Firmware version listed in this selection must match what is posted at: LennoxCommercial.com/Resources/Software.
- Or found here:



If the firmware version on the CORE Control System does not match the firmware version found at LennoxCommercial.com, please follow the directions to update the controller.

- Update instructions found at:
<https://www.lennoxcommercial.com/dA/c1dfb3f67e/file/1068876~508268-01.pdf>
- Or found here:



Thank you for updating your CORE Control System. For additional support please call 1-800-4-LENNOX.